


- A. Remove the original door.
- B. Remove the UP HINGE from the unit ,and also the SPRING HINGE.
- C. Keep the DOWN HINGE on the unit
- D. Fix the SPRING HINGE and the UP HINGE together

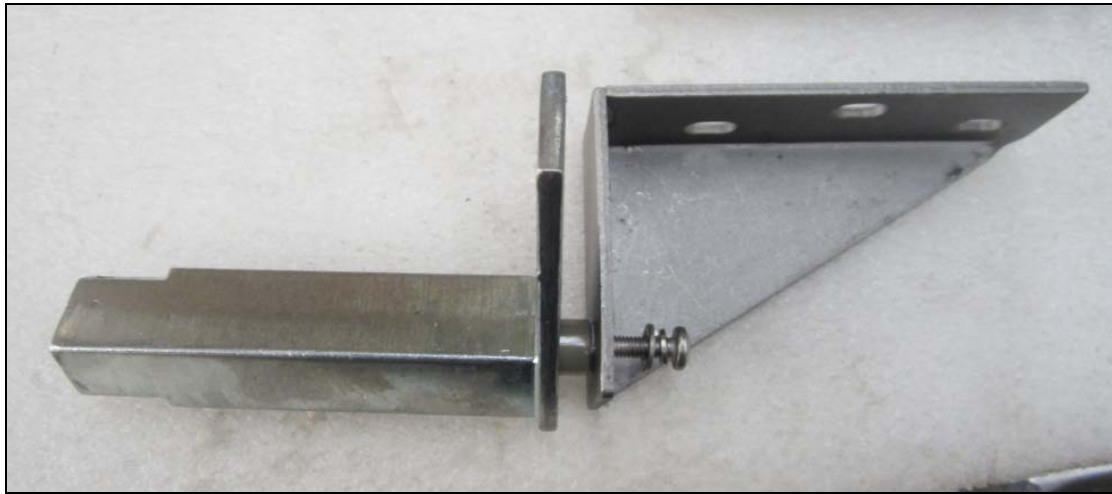

- E. Fix the hinges on to the door



There is a square hold on the UP HINGE .



When you fix the hinges on to the door .The most important thing is ,the position of the Up Hinge should be like it shows on the picture, or the spring will not work .

F. Fix the DOWN HINGE AXIS JACKET on to the door



G. Fix the door on to the DOWN HINGE



Be sure to when you fix the door on to the down hinge ,there should be two washer fixed on to the hinge.



H. Hold the up hinge ,this maybe very tight ,so be careful about this .Then tight all the screws .



DONE.